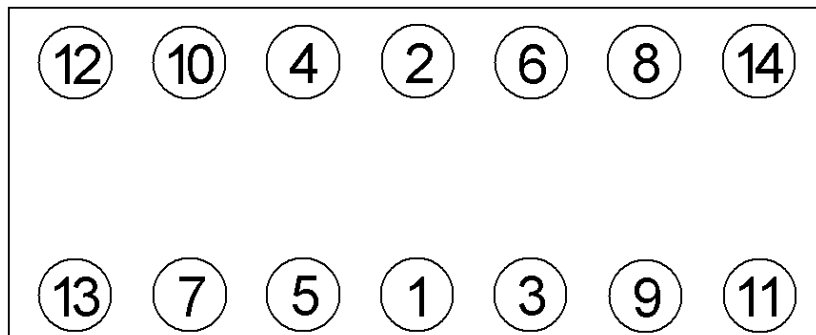


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****353.435**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo819.891
M 12 x 115Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 40 Nm
- ⊙ 60 Nm
- 90°
- 90°
- * 80°C
- 90°
- 1000 km
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

78,5 mm Ø, -/1,5 mm ÷

2,4 Ltr. Diesel, Mot.DW,1S

LT 28 - LT 50, ab Chassis 28 D 007 274>

55 kW (75 PS) 12/1982>08/1992

2,4 Ltr. Turbo-Diesel, Mot.DV,1G

LT 40,45,50, ab Chassis 28 D 007 274>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

353.435