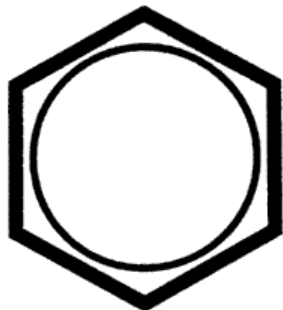
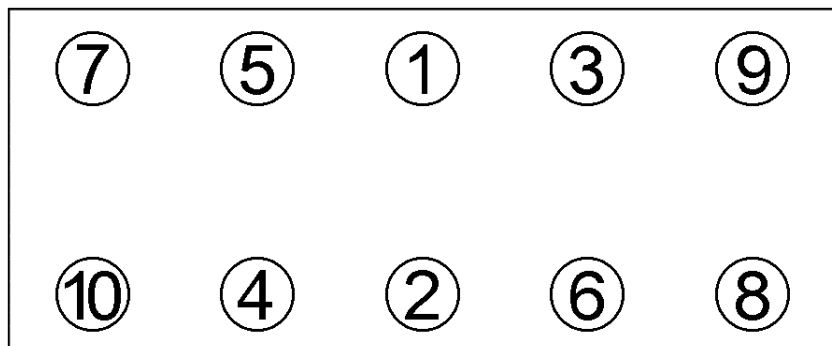


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****919.969**passend für / suitable for
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

802.940
7/16 - 135Anziehen/
Tightening/
Serrage/
Apriete 20 - 30 Nm
76 - 92 Nm
 3 min
 > 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83,8; ÷: 1,52 mm 4 Zähne/teeth/dents

Mot. RFA;RFB;RFD;RFK;RFL;RTA;RTB;RTC;RTD

RTE;RTF;RTG;RTH

1,8 ltr. 43-66 KW (58-90 PS)

Fiesta, Escort, Orion, Sierra >1992

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

919.969