

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

553.433

passend für / suitable for
adaptable à / adaptable a

Mercedes-Benz




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



759.630
M 12 x 102

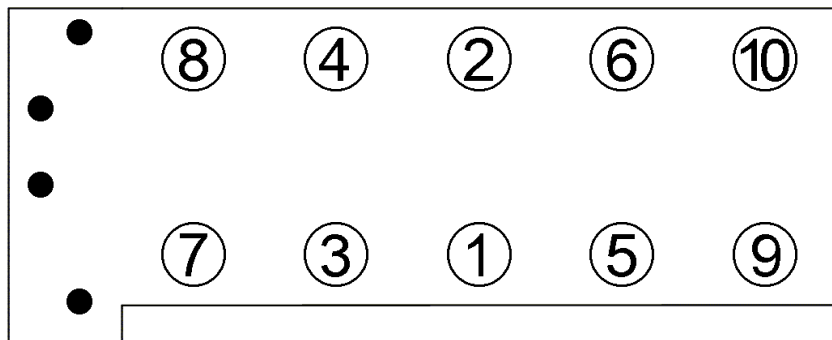

Anziehen/
Tightening/
Serrage/
Apriete

M 102.983
> 1984

M 102.983
1984 >
M 102.990

M 12 M 8
70 Nm 25 Nm
> 90°
> 90°

M 12 M 8
55 Nm 21 Nm
> 90°
> 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

97,5 mm Ø

190 E 2,3-16, M.B.102.983, 07/1984>08/1988

2,3 Ltr., 136 kW (185 PS)

190 E 2,5-16, M.B.102.990, 09/1988>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

553.433